


## 5 Basic Settings and Navigation

To set the menu language, tap **System** ⚙️, followed by **Language**, and select the language that you want.


To scroll through a long list, slide your finger up or down the screen.

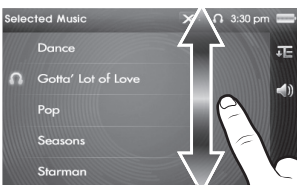

## 6 Media Toolbar

While playing or viewing contents, tap the screen to display the toolbar. Tap again to hide it.


To adjust the volume, tap 🔊 and drag the volume slider up or down. Alternatively, you can press and hold the Menu button to display the volume slider.

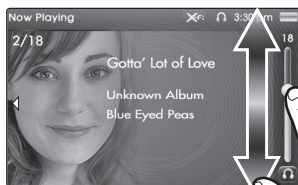

## 7 Inserting and Ejecting a Memory Card

**Inserting a Memory Card**

- ① Hold by the sides and ensure proper alignment.
- ② Gently push until it locks in place.

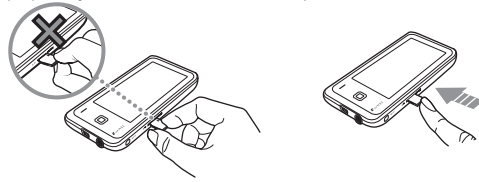

**Ejecting a Memory Card**


- ① Push to eject.
- ② Gently pull out.



## 7 Insert and Eject Storage Card

**Insert Storage Card**

- ① Push the card on both sides and align with the slot.
- ② Gently push in until the card is seated.

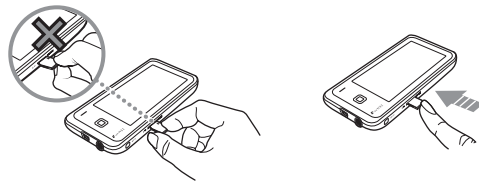

**Eject Storage Card**


- ① Press down to eject the storage card.
- ② Gently pull the card out.



## 7 Insert and Eject Memory Card

**Insert Memory Card**

- ① Hold both sides, align with the slot.
- ② Gently push, until it is fixed in place.

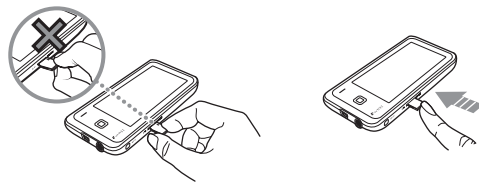

**Eject Memory Card**


- ① Push to eject.
- ② Gently pull it out.



## 7 Memory Card Insert and Removal

**Memory Card Insert**

- ① Hold both ends and hold, align with the slot, and push straight in until it locks.
- ② Push straight in until it locks.

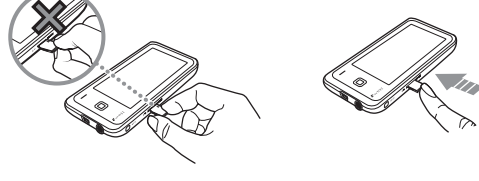

**Memory Card Removal**


- ① Push the eject button.
- ② Push straight out and pull out.



## 7 Memory Card Insert and Removal

**Memory Card Insert**

- ① Hold the card by the sides and insert it into the slot correctly.
- ② Push gently until it is seated.

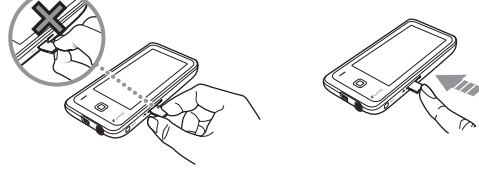

**Memory Card Removal**

- ① Push the card out gently.
- ② Push gently until it is seated.



## 8 More Information

To download the latest software, firmware, and User Guide, visit [www.creative.com/zenxfi2/getstarted](http://www.creative.com/zenxfi2/getstarted).

For information on resolving issues with your player, visit [www.creative.com/mp3playerrecoverytool](http://www.creative.com/mp3playerrecoverytool).

To register your player, visit [www.creative.com/registration](http://www.creative.com/registration). Please note that warranty rights are not dependent on product registration.

For Creative's Customer Support services, visit [www.creative.com/support](http://www.creative.com/support).

Take good care of your hearing. Avoid listening to music at very loud volume. To learn more on listening safely, read the User Guide and the Safety information.

## 8 More Information

To download the latest software, firmware and user guide, please visit [www.creative.com/zenxfi2/getstarted](http://www.creative.com/zenxfi2/getstarted).

If the player has a problem, to seek a solution, please visit [www.creative.com/mp3playerrecoverytool](http://www.creative.com/mp3playerrecoverytool).

To register your player, please visit [www.creative.com/registration](http://www.creative.com/registration). Please note that warranty rights are not dependent on product registration.

If you need Creative's customer support service, please visit [www.creative.com/support](http://www.creative.com/support).

Please take good care of your hearing. Avoid listening to music at very loud volume. To learn more on listening safely, please read the user guide and safety information.

## 8 More Information

To download the latest software, firmware and user guide, please visit [www.creative.com/zenxfi2/getstarted](http://www.creative.com/zenxfi2/getstarted).

If the player has a problem, to seek a solution, please visit [www.creative.com/mp3playerrecoverytool](http://www.creative.com/mp3playerrecoverytool).

To register your player, please visit [www.creative.com/registration](http://www.creative.com/registration). Please note that warranty rights are not dependent on product registration.


If you need Creative's customer support service, please visit [www.creative.com/support](http://www.creative.com/support).

Please take good care of your hearing. Avoid listening to music at very loud volume. To learn more on listening safely, please read the user guide and safety information.

## 5 基本设置及浏览

要设置菜单语言, 请按 **System** (系统) ⚙️, 然后按 **Language** (语言), 并选择您要的语言。


要滚动浏览较长的列表, 请在屏幕上向上或向下滑动手指。

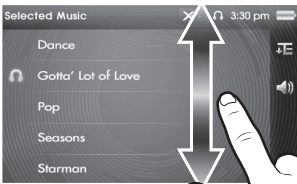

## 6 媒体工具条

播放或查看内容时, 轻按屏幕可显示工具条。再按可将其隐藏。


要调整音量, 请轻按 🔊 并向上或向下拖动音量滑块。或者, 您可以按住菜单按钮来显示音量滑块。

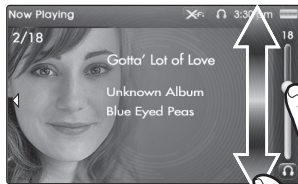

## 5 基本設定及瀏覽

如要設定選單語言, 請按 **System** (系統) ⚙️, 然後按 **Language** (語言), 並選擇您要的語言。


如要捲動瀏覽較長的清單, 請在螢幕上向上或向下滑動手指。

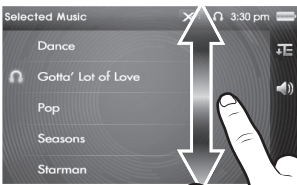

## 6 媒體工具列

在播放或檢視內容過程中, 輕按螢幕可顯示工具列。再按可將其隱藏。


如要調整音量, 請輕按 🔊 並向上或向下拖曳音量搖軸。另外, 您也可以按住選單按鈕來顯示音量搖軸。

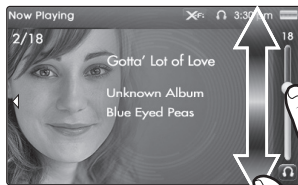

## 5 基本設定とナビゲーション

メニュー言語を設定するには、**System** (システム) ⚙️、**Language** (言語) とタップして、利用する言語を選択します。


長いリストをスクロールするには、画面で指を上下にスライドします。

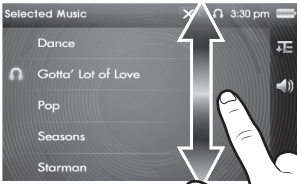

## 6 メディアツールバー

コンテンツを再生または表示している時に、画面をタップしてツールバーを表示します。非表示にするには、もう一度タップします。


ボリュームを調整するには、🔊 をタップして、ボリュームスライダを上下にドラッグします。[メニュー] ボタンを押し続けることで、ボリュームスライダを表示させることもできます。

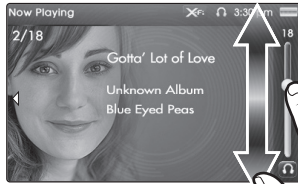

## 5 Temel Ayarlar ve Navigasyon

Menü dilini ayarlamak için, **System (Sistem)** ⚙️ üzerine dokunun, bunun ardından **Language (Dil)** üzerine dokunun ve istediğiniz dili seçin.


Uzun bir liste içerisinde kaydırma yapmak için, parmağınızı ekranda aşağı veya yukarı yönde gezdirin.

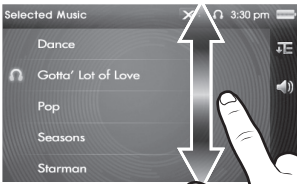

## 6 Ortam Araç Çubuğu

İçerikleri çalarken veya görüntülerken, araç çubuğunu görüntülemek için ekrana dokunun. Gizlemek için tekrar dokunun.

Sesi ayarlamak için, 🔊 üzerine dokunun ve ses kaydırma kontrolünü yukarı veya aşağı yönde sürükleyin. Alternatif olarak, ses kaydırma kontrolünü görüntülemek için Menü düğmesine basın ve basılı tutun.

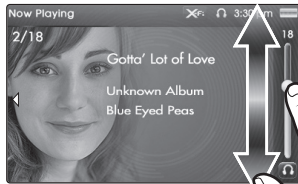

# ZEN X-Fi2

快速开始  
快速入门  
クイックスタート  
Hızlı Başlangıç

## Quick Start

CREATIVE



PN 03PF24920004RevA

English

Copyright © 2009 Creative Technology Ltd. All rights reserved. Creative, the Creative logo and ZEN X-Fi2 are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries.

简体中文

© 2009 Creative Technology Ltd. 版權所有。Creative、Creative 标志和 ZEN X-Fi2 是 Creative Technology Ltd. 在美国和/或其他国家的商标或注册商标。

繁体中文

 
© 2009 Creative Technology Ltd. 版權所有。Creative、Creative 標誌和 ZEN X-Fi2 是 Creative Technology Ltd. 在美國和/或其他國家的商標或註冊商標。

日本語

Copyright © 2009 by Creative Technology Ltd. All rights reserved. Creative、Creative のロゴ、および ZEN X-Fi2 は、米皇およびその他の国における Creative Technology Ltd の商標または登録商標です。

Türkçe

Bu ürünün Türkiye'deki garanti süresi 2 yıldır



Telif Hakkı © 2009 Creative Technology Ltd. Tüm hakları saklıdır. Creative, Creative logosu ve ZEN X-Fi2, Creative Technology Ltd.'nin Amerika Birleşik Devletleri ve/veya diğer ülkelerdeki ticari markaları ya da tescilli ticari markalarıdır.